


**Important: Read all INSTRUCTIONS carefully before installing this product. Keep instructions for future reference.**

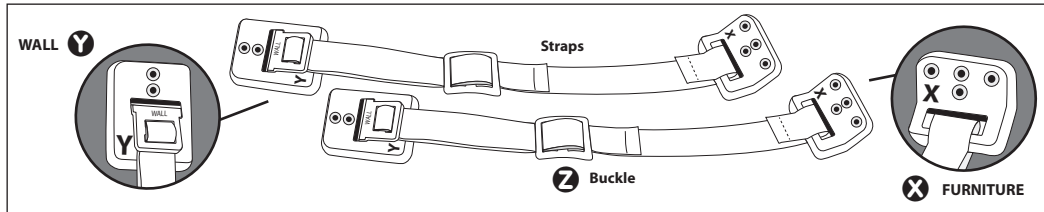

**Caution:** FURNITURE bracket (X), must be installed into framework or sturdy and solid part on back of furniture located close to the top to provide maximum protection.






When anchoring chest of drawers, ensure that screw holes will not interfere with the normal function of the drawer.

**Caution:** WALL brackets (Y) must be installed into a solid part of the wall. For plasterboard walls (drywall), each strap must be attached to a separate wall stud.

Furniture must be centred between the wall studs as closely as possible (A).

### To Install:

1. Position the FURNITURE brackets (X) onto furniture and mark screw positions to install securely into sturdy and solid part on back of furniture. Use 3 screws in a horizontal line or 2 in a vertical line.
2. Identify the WALL bracket (Y) orientation (B).
3. Slide furniture out.
4. Mark screw positions on wall for WALL brackets (Y). Position the WALL bracket (Y) as close to level or just below the FURNITURE bracket (X).
5. Drill pilot holes on marked screw positions with a 3mm (1/8in) drill bit.
6. Screw the FURNITURE brackets (X) into the furniture securely using screws (Z) (included).
7. Confirm the WALL bracket (Y) position, ideally parallel or just below the FURNITURE bracket (X) keeping the strap between 45-90° angle (C).
8. Drill pilot holes in screw location with a 3mm (1/8in) drill bit. No two plastic components should be touching.
9. Screw WALL brackets (Y) into wall using the correct fittings for the wall. Wood screws included (Z). For Brick or Masonry use the appropriate fittings, screws and plugs for your wall (not included).
10. Slide furniture back into position.
11. Pull strap on WALL bracket (Y) tightly ensuring there is no slack in the strap (D). Slide Buckle (Z) along to secure the end of the strap (E). Keep Buckle (Z) clear of hinged WALL bracket (Y) and sewn loop so it will not interfere with the hinge action of the WALL bracket (Y). Tuck excess strap into slot in FURNITURE bracket (X) and out of reach of children.

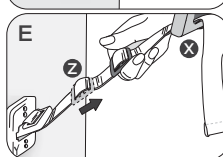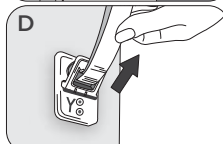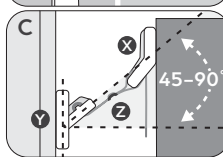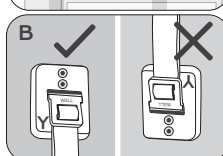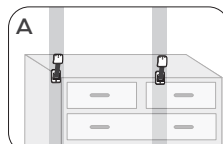

| Parts included:                                                                                   | Tools required:                             |
|---------------------------------------------------------------------------------------------------|---------------------------------------------|
| <b>Wood Screws</b><br>X x8<br>8 x 19mm<br>Y x8<br>8 x 38mm                                        | <br>Wood/masonry =<br>3mm (1/8in) drill bit |
| For Brick or Masonry use the appropriate fittings, screws and plugs for your wall (not included). |                                             |

**NOTE:** Strap is long for easy installation. Regularly check that straps are tight and securely anchored.

## WARNING

There is no substitute for proper adult supervision. This product is only a deterrent.

Discontinue use when child is able to remove it. It is important to firmly discourage children from climbing on furniture at all times.

### CAUTION:

A minimum of 2 Straps must be used on any single furniture item.

Additional straps should be used for extra strength and safety on tall or heavy furniture items.

For furniture items that are 122cm / 48in wide or wider it is recommended to use at least 3 or 4 Furniture Straps.

For stacked furniture (2 separate piece units), the 2 pieces must both be properly secured together before installing the Furniture Straps. Then use at least 2 straps on each of the 2 pieces of the stacked furniture.

All brackets must be securely screwed into a solid part of furniture and a solid part of the wall.

### KEEP INSTRUCTIONS FOR FUTURE REFERENCE.

Tee-Zed acknowledges that its customers may be entitled to statutory consumer guarantees and does not seek to exclude or limit them. These guarantees include that Tee-Zed's products are of acceptable quality. This Tee-Zed product is for the specific purpose detailed in the instructions and packaging and Tee-Zed considers use outside of that purpose to be abnormal use. To the maximum extent permitted by law, Tee-Zed does not accept any liability for damage:

- arising from abnormal use of the products;
- caused by installation or removal of the products other than in accordance with the supplied installation and removal instructions; or
- arising under the law of tort or contract.

