dreambaby®

INSTRUCTIONS: Royale Converta® 3-in-1 Play-Pen Gate

•Play-Pen •Fireplace Barrier •wide Adjusta-Gate®

ASTM F1004

F849.2003.2161

IMPORTANT! KEEP FOR FUTURE REFERENCE.

Read INSTRUCTIONS thoroughly before assembling and installing gate.

If you sell or give away this product, make sure you give this Instruction to the new owner.

⚠ WARNING

Children have died or been seriously injured when enclosures are not securely installed.

- **ALWAYS** install and use enclosures as directed using all required parts.
- **STOP** using when child can climb over or dislodge/ open the enclosure.
- Use only with the locking mechanism securely engaged.
- **NEVER** use an enclosure to keep child away from pool.
- **To prevent falls, NEVER use at top of stairs.**

- The surfaces that the enclosure is to be fixed to must be suitable for purpose and structurally sound.
- Intended for use with children from 6 months through 24 months.
- This enclosure has a manual close system.
- This product will not necessarily prevent all accidents. **NEVER** leave child unattended.
- The Play-Pen is not intended for sleep use.
- Do not place the Play-Pen close to an open fire or other heat source.
- *If using this enclosure as a fireplace barrier, see instruction manual for minimum distance from heat source
- This enclosure is intended for indoor use and is not to be exposed to outdoor elements.
- Discontinue use if gate becomes damaged, broken, or disassembled.
- Do not leave anything in the Play-Pen which may provide a foothold for climbing
- The safety barrier must not be fitted across windows.
- This barrier is for domestic use only.

Fits Opening 3.8m / 151in

Components


- Ⓐ Gate Panel
- Ⓑ Barrier Panel
- Ⓒ Upper Securing Hinge
- Ⓓ Securing Screw
- Ⓔ Lower Hinge
- Ⓕ Vertical Bar
- Ⓖ Vertical Bar Top Casing
- Ⓗ Gate Release Switch
- Ⓘ Gate Upper Lock
- Ⓙ Gate Lower Lock

Wall Mounting Parts


- Ⓚ Upper Mount (Side X)
- Ⓛ Upper Mount (Side Y)
- Ⓜ Lower Mounts
- Ⓝ Wood Screws (38mm / 1.5in)
- Ⓞ Lower Hinge Cap (Installed)
- Ⓟ Floor Cap


Required for Assembly/Mounting

- Ⓠ Allen Key (4mm)

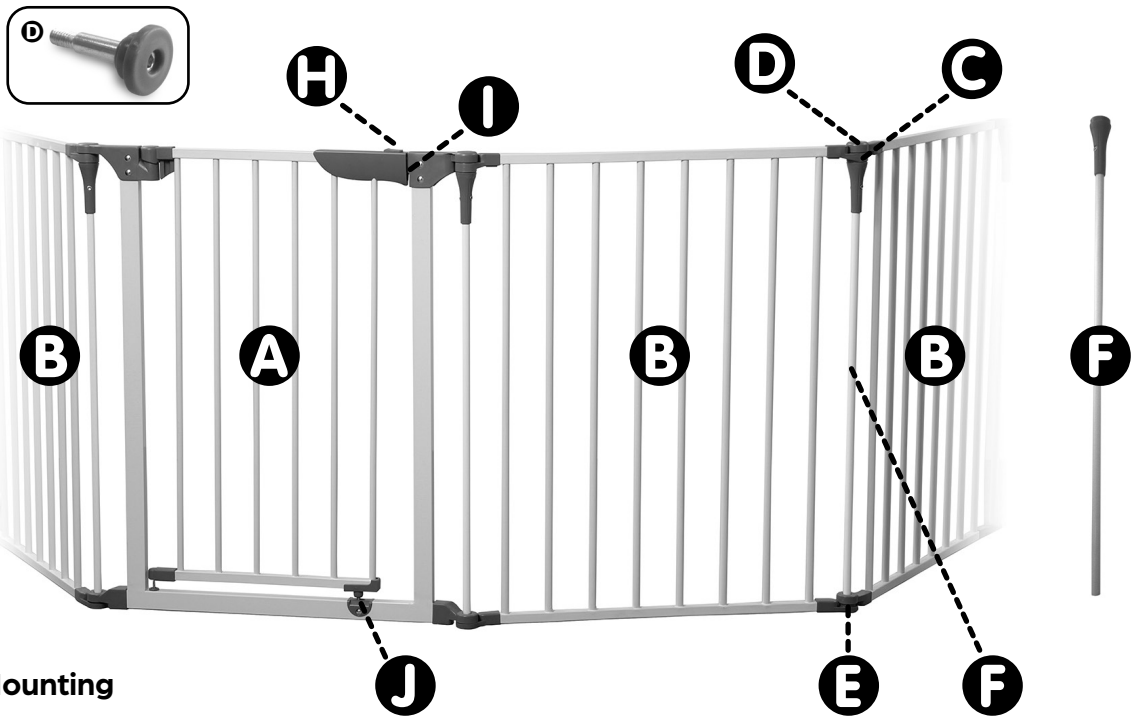




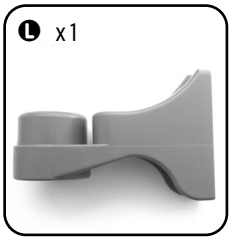

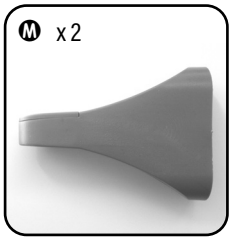



For Brick or Masonry use the appropriate fittings, screws and plugs for your wall (not included).



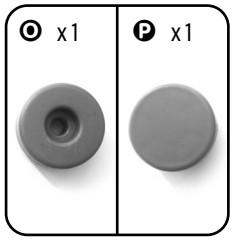




NOTE:
Store Allen Key safely out of reach of children. Keep for future use.

Play–Pen Assembly

1. Remove Play-Yard from packaging and place upright on flat surface.
2. Position panels to desired shape.
3. The vertical bars **F** at each end of the Play-Yard must first be removed.
   Note- For Play-Yard assembly only one of these vertical bars are required.
   The other vertical bar is only used when wall mounting as a barrier gate or fire barrier, store for future use. For shipping purposes one of these vertical bars is temporarily secured at the lower hinge **E** with a securing screw **D**.
   ·Use Allen Key **Q** to remove securing screw **D** from upper securing hinge **C**, and lower hinge **E**. Keep screws for future use. Keep out of reach of children.
   ·Release the vertical bars **F** from the upper securing hinge **C** by pulling down on the top casing G.
   ·Twist to release and remove vertical bar **F** from lower hinge **E**.

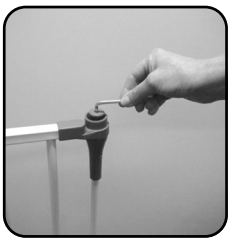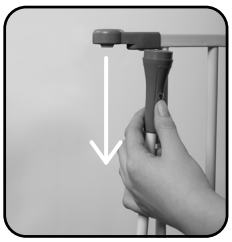
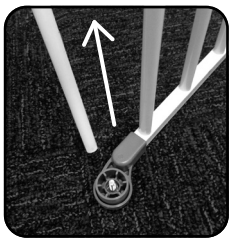




4. Join panels by connecting upper securing hinge **C** and lower hinge **E**.



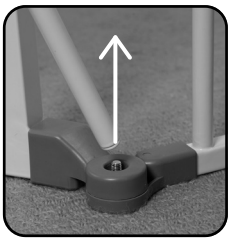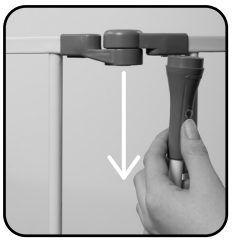

5. Install vertical bar **F**.
   ·Insert vertical bar into lower hinge **E**. Twist to lock into place.
   ·Pull down top casing **G** and insert into upper securing hinge **C**.
   ·Insert securing screw **D** and position in place with Allen Key **Q**.



6. Position Play-Pen into desired shape, then lock and secure by firmly tightening all securing screws **D** using Allen Key **Q**.






Assembled Play–Pen



Play–Mats Available
(sold separately)
F962/F2006/F2163





Gate Extensions
(sold separately)
F1950/F2005/F2166 Note- minimum of 2 panels can be added.

Barrier Gate or Fireplace Barrier Installation

Ensure the surface you mounting the barrier is structurally sound such as solid timber, brick or masonry. DO NOT install to hollow walls. For plaster/gyprock surface, locate the timber beam or stud behind and mount in this location (mounting on plaster/gyprock alone is not strong enough and not safe). **DO NOT MOUNT TO GLASS.**

1. Follow steps 1-3 of Play-Pen assembly.
2. Locate best position for barrier gate/fireplace barrier to be installed. Position panels to desired shape placing end panels close to the wall.
3. Cut out templates and position on wall.
   Note- The 2 ends of the barrier gate/fireplace barrier are different. Match the template to correct end.
4. Mark screw holes.
5. Drill holes.
6. Install wall mounts Side **X** and Side **Y**.

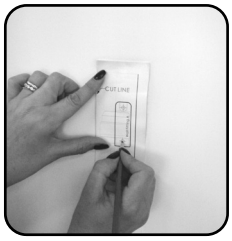Side X

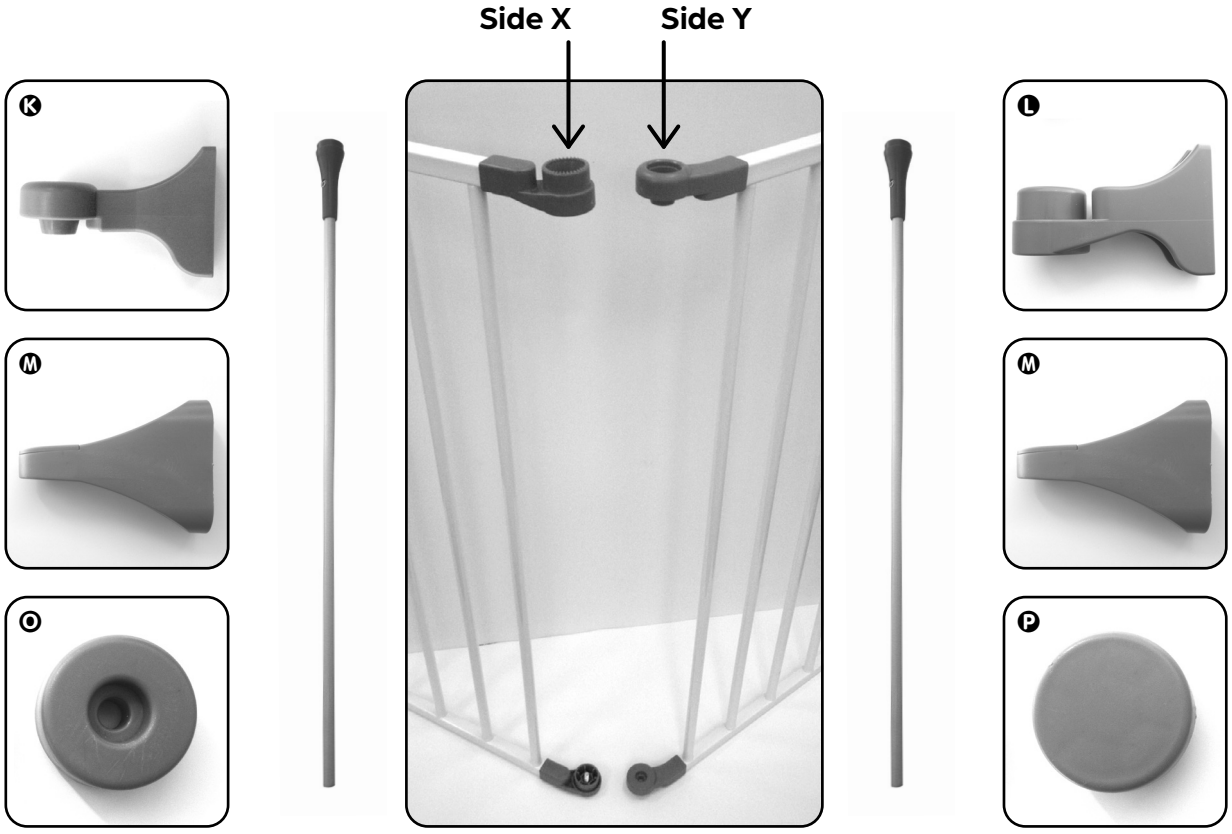1. Insert upper mount Ⓚ and lower hinge cap Ⓞ.
2. Thread lower mount Ⓜ onto vertical bar Ⓕ.
3. Install vertical bar Ⓕ into lower hinge cap Ⓞ and upper mount Ⓚ.
4. Insert securing screw Ⓓ and position in place with Allen Key Ⓠ.









Side Y

1. Thread lower mount Ⓜ onto vertical bar Ⓕ.
2. Install floor cap Ⓟ under lower hinge Ⓔ.
3. Insert upper mount Ⓛ onto upper securing hinge Ⓒ and hold in place.
4. Insert vertical bar Ⓕ into lower hinge Ⓔ and upper mount Ⓛ.
5. Insert securing screw Ⓓ and position in place with Allen Key Ⓠ.

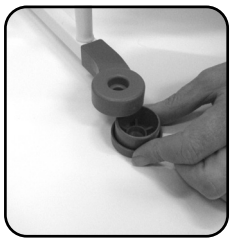


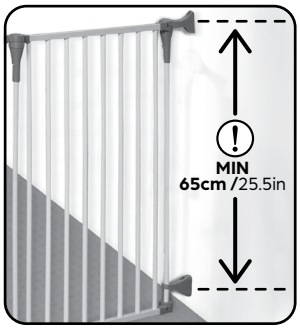


7. Align both sides with template and affix with screws Ⓝ.






For Brick or Masonry use the appropriate fittings, screws and plugs for your wall (not included)

8. Position barrier gate/fireplace barrier into desired shape, then lock and secure by firmly tightening all securing screws Ⓓ using Allen Key Ⓠ.





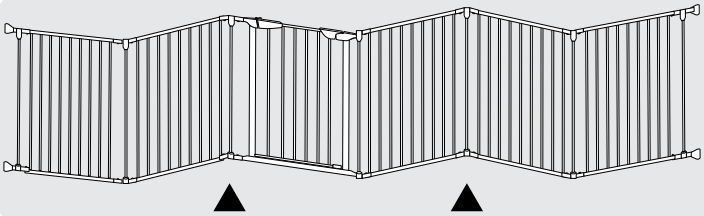

To reduce movement across a wide span, form a ZIG-ZAG shape with the panels.



Assembled wide Adjusta-Gate®

⚠ **WARNING:** If using this enclosure as a fireplace barrier, ensure it is installed at least **60cm/23.5"** from fire source.
- Regularly check the plastic parts of the barrier.
- Discontinue use if any sign of discolouration or warping.
- If the Barrier is hot to touch, it is too close to fire source. Reinstall Barrier further away from fire source.
- Fireplace door must NOT be LEFT open at any time.


Ⓐ For built in gas or electric heaters recessed into a fireplace maintain a distance of **60cm/23.5"** from fire source.


Ⓑ For open, wood burning recessed fireplaces maintain a distance of **80cm/31.5"** from the fire source.

Ⓒ For non-recessed fireplaces that protrude from the wall such as pot belly stoves, a minimum distance of **80cm** should be maintained around the entire perimeter of fire source.
For stoves where the exterior surface temperature can reach temperatures above **260ºC/500ºF** maintain at least **90cm** distance around the entire perimeter of heat source.

Ⓓ **NOTE -** For fireplaces with a door, the **distance must be measured** from the outer edge of open door. Ensure not to leave the door open at any time.

***FIREPLACE BARRIER**

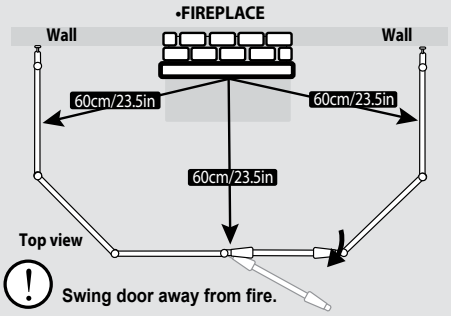

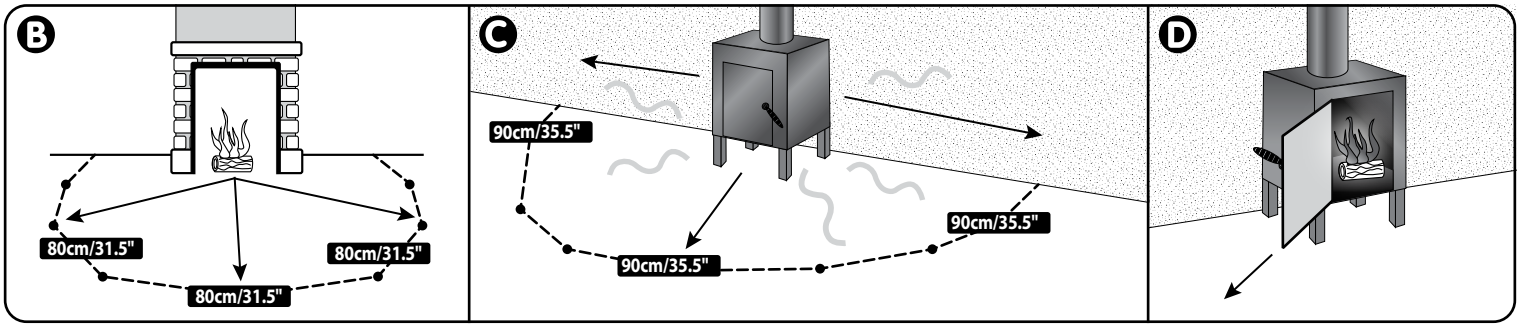

GATE OPERATION

1. Slide the release switch Ⓗ and lift gate panel Ⓐ.
   Gate swings in both directions.
2. Swing gate closed ensuring upper Ⓘ and lower Ⓙ locks engaged.
3. Swing gate fully open to engage SMART STAY OPEN feature.
   Caution: This safety gate has a manual close system.
   Keep gate closed when children are present.





MAINTENANCE & CARE

- Play-Pen/Fireplace Barrier/Barrier Gate must be fitted according to instructions to ensure it works correctly.
- Regularly check all parts to ensure Play-Pen/Fireplace Barrier/Wide Barrier Gate is secure. Adjust as required.
- To clean, wipe surface with a damp cloth using mild detergent and warm water. Never clean with abrasive, ammonia, bleach or spirit based type cleaner.
- Only use Dreambaby® spare parts. Any additional and replacement parts should be obtained from Tee-Zed Products.

Tee-Zed acknowledges that its customers may be entitled to statutory consumer guarantees and does not seek to exclude or limit them. These guarantees include that Tee-Zed's products are of acceptable quality. This Tee-Zed product is for the specific purpose detailed in the instructions and packaging and Tee-Zed considers use outside of that purpose to be abnormal use. To the maximum extent permitted by law, Tee-Zed does not accept any liability for damage:
- arising from abnormal use of the products;
- caused by installation or removal of the products other than in accordance with the supplied installation and removal instructions; or
- arising under the law of tort or contract.

Tee-Zed Products Pty Ltd
PO Box 2022,
Bondi Junction NSW 1355
AU +61 (0)2 9386 4000
info@tee-zed.com.au
www.dreambaby.com.au

Tee-Zed Products (N.Z.) Ltd
PO Box 64013,
Botany Town Centre Auckland
NZ +64 (0)9 274 8788
info@tee-zed.co.nz
www.dreambaby.co.nz

Tee-Zed Products Ltd
PO Box 29227,
Dunfermline, KY12 2DN
UK +44 (0)844 800 9445
info@tee-zed.co.uk
www.dreambaby.co.uk

Tee-Zed Products (EU) Ltd
PO Box 3419, 5203DK **NL**
+35314428778
info@tee-zed.eu

Made in China.
©2024 Tee-Zed Products Pty Ltd

#dreambabysafety

YouTube
dreambabytv

F849.2003.2161_IM_07.2023_X.06