

Important: Keep instructions for future reference.
Read instructions carefully before installing or using any of these products.


Dreambaby® CoverPlug® helps prevent children from placing objects into electrical outlets.
Hide complete outlet from view & it can be painted to blend in with the wall.
Suits Décor and Standard outlets.

To Use:

Line up the rear pins with the 'Earth Holes' (A), insert to conceal outlet plate.
Remove whole CoverPlug® to access the outlets.

Caution: There is no substitute for proper adult supervision. This product is only a deterrent. Discontinue use when child is able to open or remove it. Do not use if product is damaged or broken. Remove the CoverPlug® from outlet to paint. Paint only the front surface of the CoverPlug®.

Warning: Do not use in outlets that are worn or damaged. Discontinue use if product cannot fit tightly into outlet.

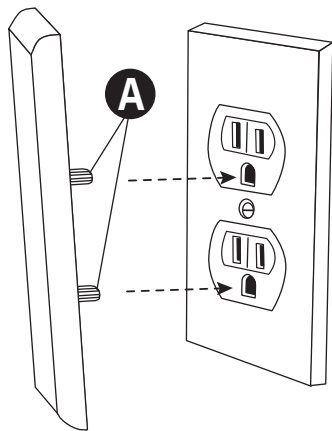

TEE-ZED PRODUCTS, LLC ACCEPTS NO RESPONSIBILITY FOR ANY LOSS OR DAMAGE SUFFERED BY ANY PERSON AS A RESULT OF THE USE OR MISUSE OF THESE GOODS. IN THE CASE OF ANY DEFECT IN THE GOODS, TEE-ZED'S LIABILITY SHALL BE LIMITED SOLELY TO REPLACEMENT OF THE DEFECTIVE GOODS.

Tee-Zed Products, LLC
PO Box 1662,
Jamestown, NC 27282
USA ☎ 336-454-5716,
Toll free: 1-888-271-6959
✉ info@tee-zed.com
www.dreambaby.com

AUSTRALIA
✉ info@tee-zed.com.au
www.dreambaby.com.au

Made in Jiangmen, China.
©2024 Tee-Zed Products LLC



#dreambabysafety



dreambabytv

Importante: Conserve estas instrucciones para futura referencia.
Lea las instrucciones cuidadosamente antes de instalar o usar cualquiera de estos productos.

El CoverPlug® de Dreambaby® ayuda a evitar que los niños metan objetos dentro de los tomacorriente.
Esconde por completo el tomacorriente y puede pintarse para que combine bien con la pared.
Va bien con la decoración y los tomacorriente estándar.


Para usar:

Alinee las clavijas posteriores con los 'Earth Holes' (A), e introdúzcalas para esconder la placa del tomacorriente.

Quite todo el CoverPlug® para acceder a los tomacorriente.

Precaución: No hay sustituto para la supervisión correcta de un adulto. Este producto es sólo preventivo. No utilice enchufes cuando se tomacorriente está desgastado o dañado. No use este producto si está dañado o quebrado. Quite el CoverPlug® antes de pintar. Solamente pinta la superficie frontal del CoverPlug®.

Advertencia: No utilice enchufes cuando los tomacorrientes están desgastados o dañados.
Descontinúe su uso cuando el niño pueda quitarlo.

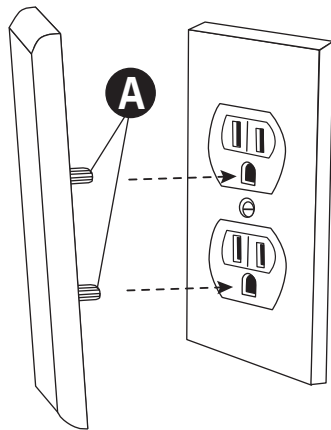

TEE-ZED PRODUCTS, LLC NO SE HACE RESPONSABLE DE NINGUNA PÉRDIDA O DAÑO SUFRIDO POR ALGUNA PERSONA COMO RESULTADO DEL USO O DE LA MALA UTILIZACIÓN DE ESTAS MERCANCÍAS. EN CASO DE CUALQUIER DEFECTO EN LAS MERCANCÍAS, LA RESPONSABILIDAD DE TEE-ZED SERÁ LIMITADA ÚNICAMENTE AL REEMPLAZO DE LAS MERCANCÍAS DEFECTUOSAS.

Tee-Zed Products, LLC
PO Box 1662,
Jamestown, NC 27282
USA ☎ 336-454-5716,
Toll free: 1-888-271-6959
✉ info@tee-zed.com
www.dreambaby.com

AUSTRALIA
✉ info@tee-zed.com.au
www.dreambaby.com.au

Hecho en China
©2024 Tee-Zed Products LLC



#dreambabysafety

 **YouTube**
dreambabytv